

R1 SPLITTER 14'-15' SILVERADO

Tools needed:



- 3/16" Drill Bit for Support Rods
- Hex Bit set
- M15 Socket/Wrench

Step 1:

Remove the plastic valance. There are screws from the underside/behind the bumper all along the edge. We recommend watching a youtube video we have on our website in the INSTRUCTIONS page. Be careful not to lose the screws as you will re-use them.


Step 2:

Remove the C-Clip Nuts from the valance and put them on the steel bumper as shown.

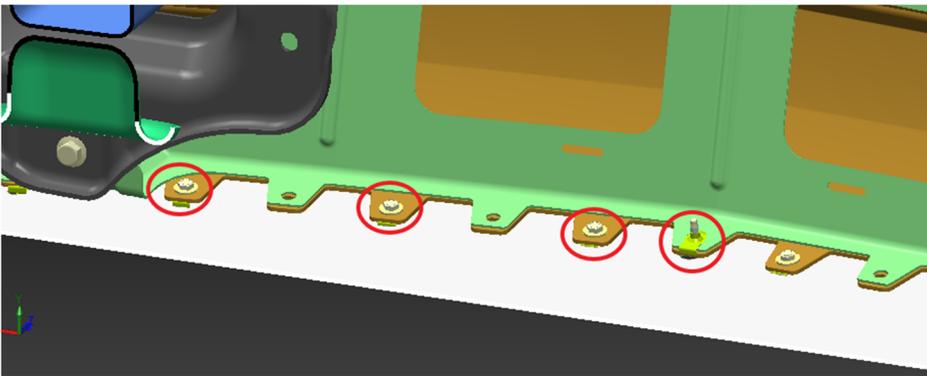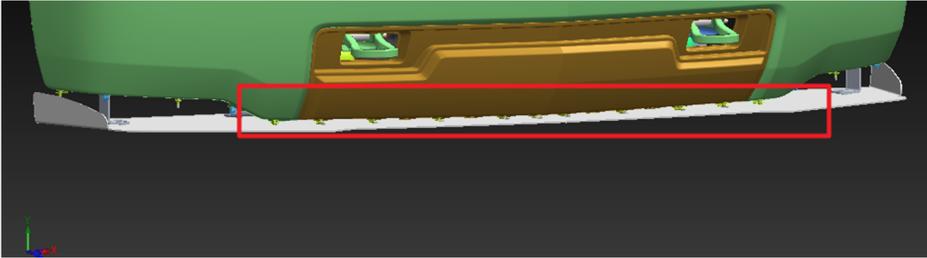


Step 3:

Bolt on the outer brackets as shown using the same bumper brace bolt.

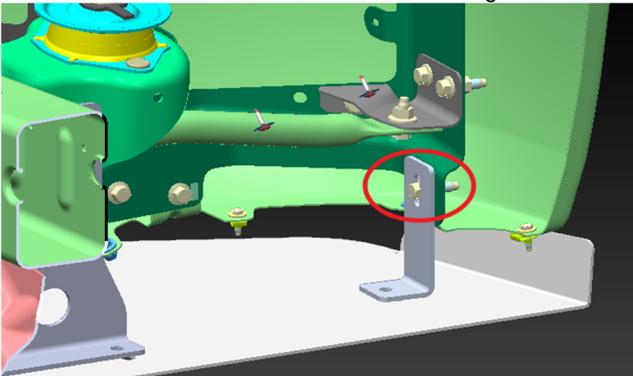

Step 4:

Bolt on the large rear bracket using the same bolts.

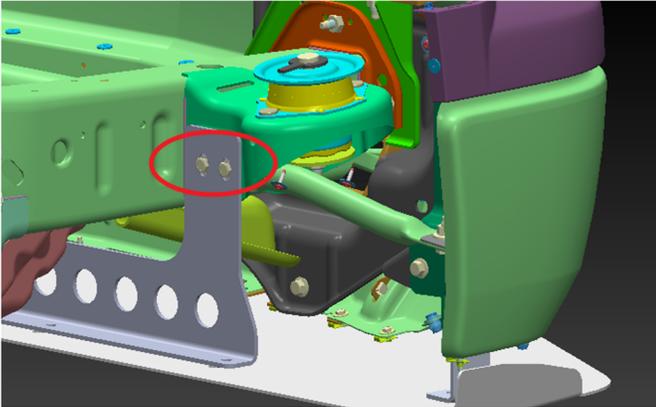

Step 5:

Bolt the splitter on to the brackets and bumper. But don't fully tighten the bolts.

Step 6:

Mock up the Support Rods and figure out where you want them. Mark where you will need to drill the holes; Remove the bumper.

Step 7:

Drill the holes and bolt on the support rods to the bumper only. Leave them hanging.

Step 8:

Now you can bolt on the splitter for good and bolt on the supports on as well. Make sure everything is tight and that is pretty much it!